

STANDARD DOOR SURROUND INSTALLATION

**Please Read
And Follow All
Installation
Instructions
Carefully**

Important Information:

Use only premium polyurethane construction adhesive and mechanical fasteners (screws or nails) to install the door surround.

Step 1. Determine Door Opening Size (X Dimension)

Measure the width of your door or door opening. Determine whether brickmold is required. (Storm doors require brickmold.) See Figure 2.

Step 2. Determine Crosshead Width (A Dimension)

Measure the width of the pilaster and multiply x 2. Add the "X" dimension calculated in Step 1. This is the length of the crosshead breastboard required.

If you are not using a custom-fit crosshead and your *crosshead is too long*, cut it in half and trim from the center to the appropriate length and then use a keystone to cover the cut.

If the your *crosshead is too short*, you will need to order a second crosshead and piece them together at the center and then use a keystone to cover the cut.

Step 3. Install Pilaster, Crosshead and Keystone

Affix each piece to the wall using a premium polyurethane construction adhesive and mechanical fasteners (screws or nails).

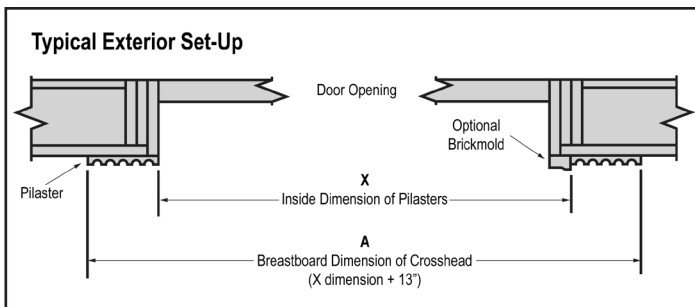


Figure 1

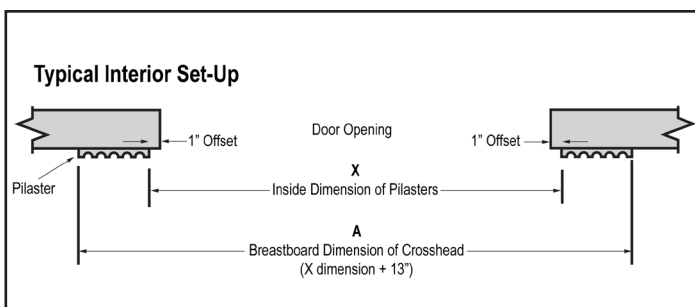


Figure 2

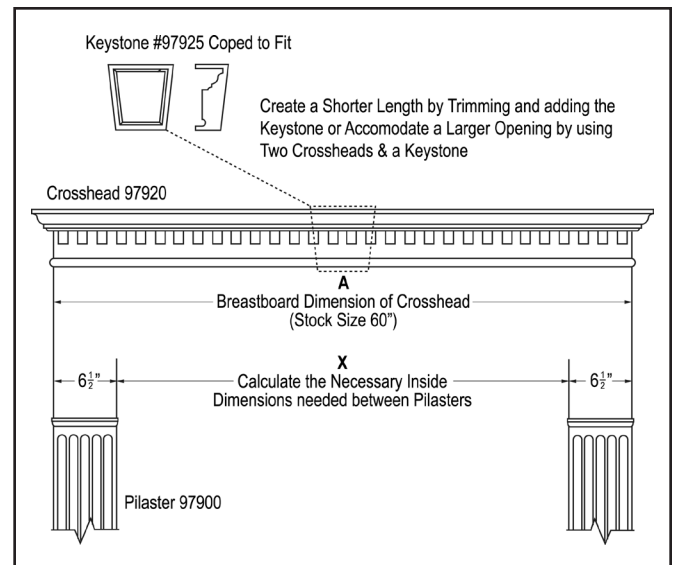


Figure 3